
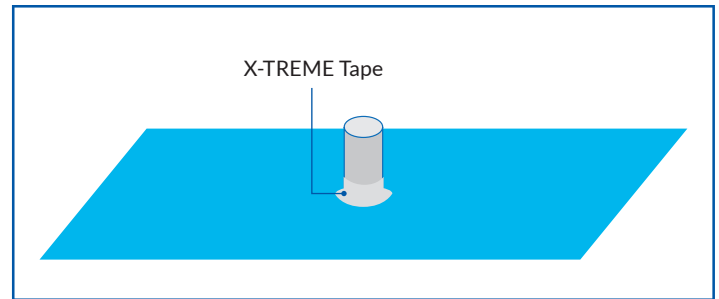




X-TREME® VAPOR BARRIER PENETRATIONS

All penetrations must be sealed. Inspect the area and determine if the space around the pipe is Small or Large. A small space can be sealed with the X-TREME Tape. A larger space will need to be sealed with an X-TREME Patch. Please see below for details.

Small or minimum space around pipe: Place the X-TREME Tape around the pipe, insuring the tape has covered the pipe and is attached to the X-TREME Vapor Barrier more than adequately.

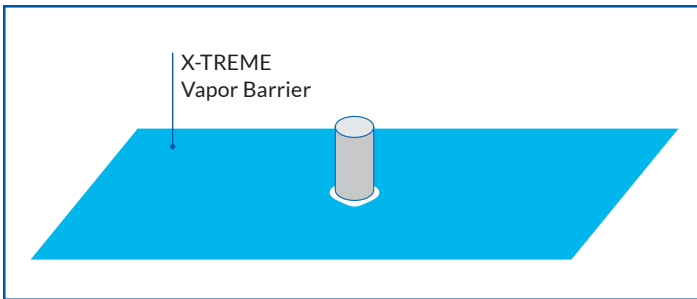

Larger spaces around pipe: Cut a piece of X-TREME Vapor Barrier in a shape, larger than the repair, insuring a minimum 6" overlap in all directions and tape all of the edges. Cut an X the size of the pipe or slightly smaller for a snug fit and slide the patch over the pipe and seal the pipe with the X-TREME Tape.

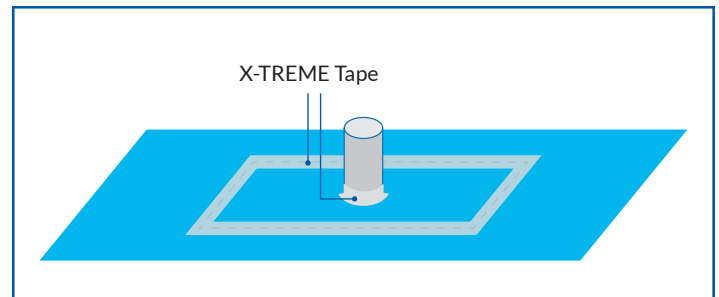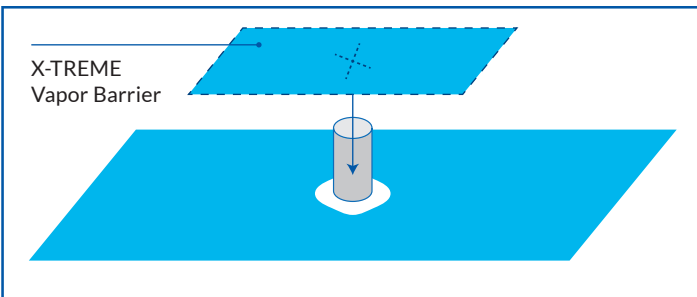

Note: For maximum adhesion, apply the X-TREME Tape immediately after the X-TREME Vapor Barrier Patch has been placed. The X-TREME Vapor Barrier area should be free from dirt, dust, debris and moisture.