


X-TREME® TEX-CAP

1. Set the expansion board $\frac{1}{4}$ inch below the level of the concrete being placed. Unroll the X-TREME Tex Cap and place on the board.

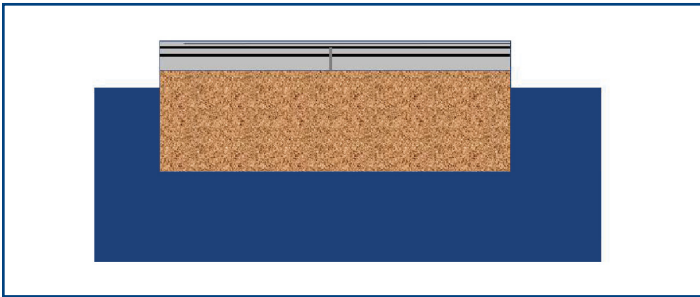

2. Butt the ends of the X-TREME Tex Cap together. Use 3M Scotch-Grip 4475 Plastic Adhesive to seal the two pieces together. The result should be a monolithic cap joint, sealed at all connections.



3. Secure the X-TREME Tex Cap on the expansion board with Staples or Nails to hold in place during the concrete pour.

